



# how to install roller blind

## Parts

+ Chain End  
Bracket x 1

+ Pin End  
Bracket x 1

+ Installation  
Screws (2 per bracket)

+ Inter Bracket  
(for split blinds)

## Step 1

Determine the placement of each brackets at the top corners of the frame or the architrave (depending on the fitting method).

## Step 2

Mark the desired position of the brackets and measure the distance apart to ensure blind will fit.

## Step 3

Screw through the back of the bracket, or alternatively if inside-mounting, through the side of the bracket against the frame.

*Take into consideration the thickness of the headrail when blind is fully rolled up.*



### Inter-Bracket (if applicable)

Align the inter-bracket with brackets in the corners to ensure perfect fit.

## Step 4

Turn the clear gear disc on the pin end to retract the pin.



### Inside fit

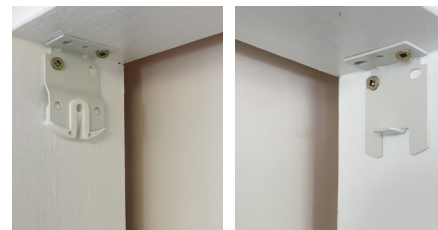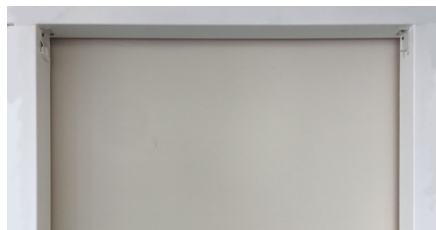

### Inside fit - Dual bracket



### Outside fit with inter bracket (for split blinds)

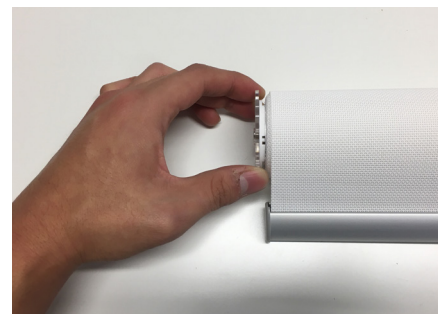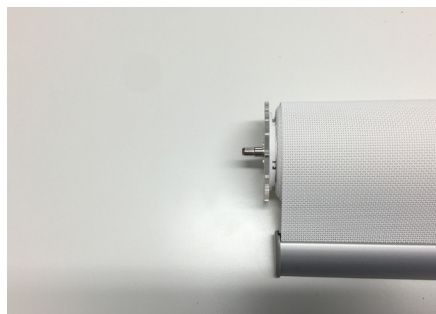



### Step 5

Hold the blind so that the chain is hanging down correctly as shown.



### Step 6

Insert the chain end on to the tongue projecting out from the chain end bracket.



### Step 7

Once the chain end is set correctly, slide in the pin end and reverse the gear disc to extend the pin into the bracket hole.



### Step 8

Once the blind is installed, test the blind by rolling up and down using the control chain.

Inside fit



Inside fit - Dual bracket



Outside fit with inter bracket

